

CONVECTION & FINISHING OVENS

CONTROLS AND FUNCTIONS

1. Left Knob: Turns machine on. Turn left for continuous heat. Turn right for timer.
2. Light Indicator: When on, elements are heating up. Light will go out when set temperature is attained.
3. Temperature Knob: The right knob and can be set to temperatures between 175 Degrees and 500 Degrees.

OPERATING

CONTINUOUS ON

Turn knob left to "On" position. Unit will remain on until knob is turned back to "OFF".

TIMER

Turn knob to select cooking times up to 120 minutes. Time will automatically turn oven off at completion of time.

CLEANING

1. Always unplug unit before cleaning.
2. The interior of the oven can be cleaned easily. Use mild detergents.
 - a. NOTE: Do not use any abrasive products
3. The outer sides of the oven are stainless steel and can be cleaned easily with any cleaner recommended for stainless steel.
4. The door can be removed for cleaning.
5. To replace the interior light, unscrew the glass cover and replace with an oven temperature approved bulb.