

COTTON CANDY MACHINE

ELECTICAL REQUIREMENTS:

The following power supply must be provided for your Floss Machine:
3017SS: 120 Volts, 1248 Watts, 60Hz

NOTE: YOUR ELECTRICIAN MUST FURNISH SUFFICIENT POWER FOR PROPER MACHINE OPERATION. WE RECOMMEND THIS FLOSS MACHINE TO BE ON A DEDICATED AND PROTECTED CIRCUIT. FAILURE TO WIRE PROPERLY WILL VOID THE WARRANTY AND MAY RESULT IN DAMAGE TO MACHINE. WE DO NOT RECOMMEND USING AN EXTENSION CORD DUE TO SAFETY CONCERNS, AND MAY CAUSE SACRIFICED AND/OR REDUCED PERFORMANCE.

CONTROLS AND THEIR FUNCTIONS

1. Main Switch: Turns motor "ON" or "OFF" and supplies voltage to the heat switch.
2. Heat Switch: Turns voltage to the heating element (ribbon) "ON" or "OFF".
3. Heat Control Knob: Increases or decreases voltage to heating element (ribbon) using a graduated dial.

OPERATING INSTRUCTIONS

1. Always wear eye protection. The sugar can fly up and damage eyes.
2. Use floss cone to collect cotton candy.
3. With the main switch off, fill the floss head about 90% full with sugar.
NOTE: Do not overfill.
4. When filling, there may be a vibration type noise until head is full.
5. Before turning the power on, manually turn the head to balance out the sugar to eliminate excessive vibration of the head.
6. Plug machine in and turn Main Switch and Heat Switch to "ON" position.
7. Turn the Heat Control Knob clockwise to maximum setting to initiate the fastest possible warm-up.
8. The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting. Turn the Heat Control Knob counter clockwise to eliminate smoking.

CONTINUED...

COTTON CANDY MACHINE

(CONTINUED)

MAKING FLOSS

1. Grip cone about one (1) to two (2) inches from pointed side between thumb and two fingers.
2. Using a light flicking action, roll cone in the web of floss building up the pan.
3. Lift up cone with the ring of floss attached and rotate the cone to wrap the floss.

NOTE: Do not roll floss while the cone is inside the pan. This will pack the floss too tightly.
4. If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand.
5. Work floss away from center of the machine. You may make several servings approximately ten (10) at a time. Once ten (10) is made turn off the Heat Switch first and let it cool to prevent sugar from burning and clogging the machine.
6. Once cooled repeat steps.
7. When finished making Cotton Candy for the last time, Turn off the Heat Switch first, and let cool before turning machine completely off.

CLEANING

DO NOT ATTEMPT TO CLEAN THIS MACHINE. PROBLEMS MAY OCCUR.

IMPORTANT SAFETY

1. Do not put hands or objects in rotating spinner head.
2. Do not fill spinner head with sugar while it is rotating.
3. Wear eye protection.
4. Do not put hands near rotating spinner head.
5. Use floss cone to collect Cotton Candy.