

HOT BOX

MODEL NO.	VOLTS	WATTS	AMPS	HERTZ	PHASE	NEMA
1301836D 131UA11D 131UA9D	120	1920	16.6	60	1	5-20P
1301836D208 131UA11D208 131UA9D208	208	2000	9.6	60	1	6-15A
1301836D240 131UA11D240 131UA9D240	240	2000	8.6	60	1	6-15A

OPERATING

1. Turn the POWER switch on. Yellow light will come on. Turn thermostat to ten (10) and preheat for thirty (30) minutes.
2. Put food in cabinet and turn the thermostat down to eight (8).
3. When finished turn thermostat off first.
4. Turn the POWER switch off. The yellow light will go off.

CLEANING

NOTE: DO NOT USE ABRASIVES OR HARSH CHEMICALS ON MACHINES. THIS WILL CAUSE DAMAGE.

1. This machine is intended to be cleaned using high pressure cleaning methods.
2. Wipe up spills as soon as possible and clean cabinet regularly to avoid heavy dirt build-up.